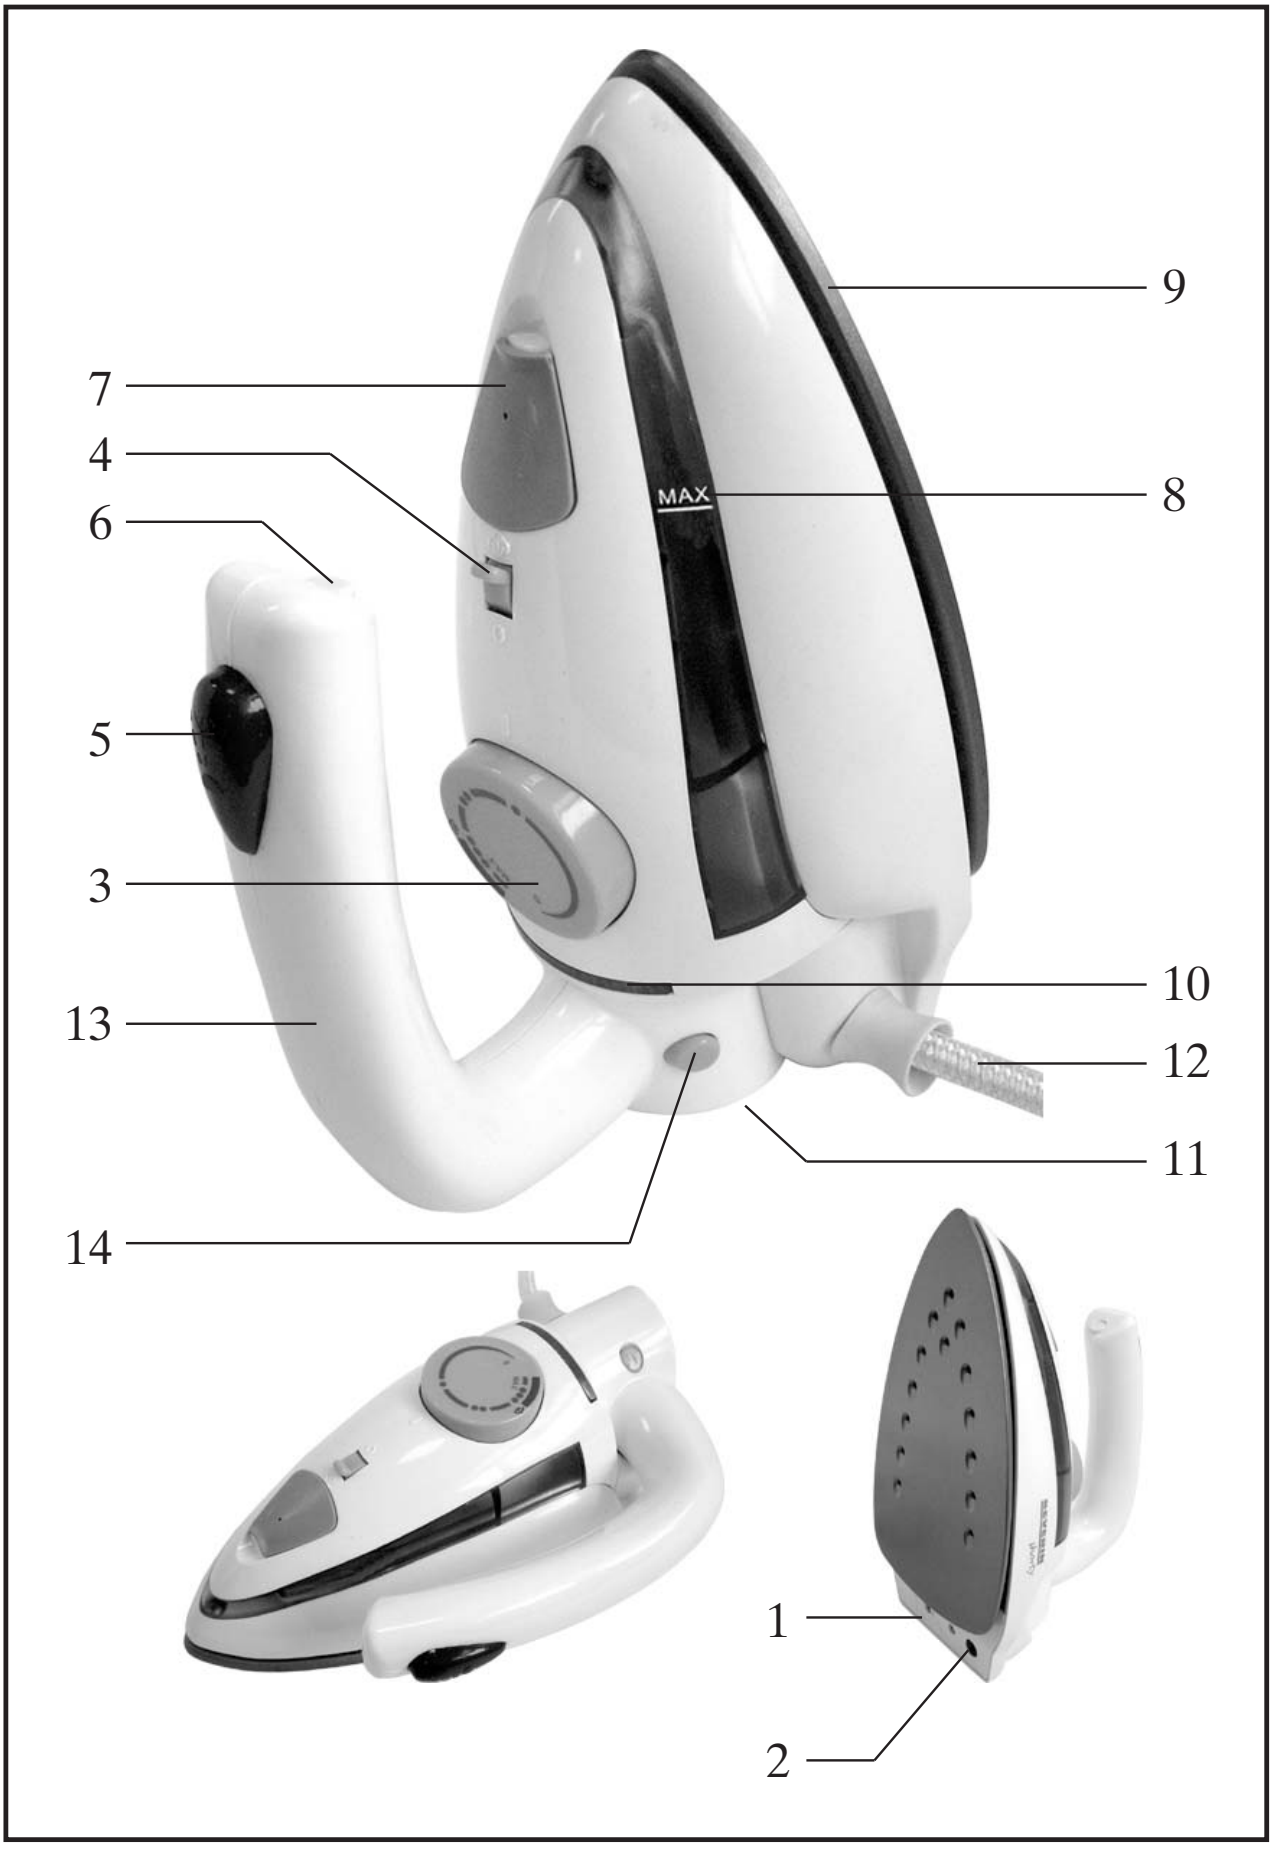
9
7
4
MAX
8
6
5
3
10
13
12
11
14
1
2

GB

Travel iron

Dear Customer,
Before using the appliance, the user should read the following instructions carefully.

Connection to the mains supply
The appliance should only be connected to an earthed socket installed in accordance with the regulations.
Dual-voltage selector:
With the dual voltage selector, the iron can be set to different supply voltages by using a screwdriver or similar tool. Make sure that the set voltage corresponds with the supply voltage.
This product complies with all binding CE labelling directives.

Familiarisation
1. Rating label
2. Dual voltage selector
3. Temperature control knob, infinitely adjustable
4. Steam switch
5. Spray button
6. Spray nozzle
7. Water fill hole
8. Water level indication
9. Soleplate
10. Indicator light
11. Stand (base and handle)
12. Power cord with plug
13. Foldable handle
14. Handle release

Important safety instructions
- Do not use the iron if it has been dropped onto a hard surface, or shows any other sign of damage, or is seen to leak water.
- The steam travel iron is not suitable for regular domestic use.
- Great care is necessary when using any appliance, especially near chil-dren. Do not leave the steam iron unattended while connected or on an ironing board. Always remove the plug from the wall socket and place the steam iron on its base stand.
- The appliance operates at very high temperatures. Do not touch any part of the appliance except the handle. Burns can occur from touching the hot parts of the housing or the soleplate and from hot water or steam. When operating the steam iron, hold only by the handle. Do not allow steam to escape in the direction of anyone nearby.
- The iron must be used and stored on a stable and durable surface only.
- With the iron placed on its base stand, ensure that this too is on a stable and durable surface.
- Do not allow the power cord to touch hot surfaces. Do not coil the power cord round the appliance.
- **Always switch off and remove the plug from the wall socket after use, and also**
  - **in case of any malfunction,**
  - **during cleaning.**
- Before the appliance is used, the main body including the power cord as well as any attachment fitted should be checked thoroughly for any defects. Should the appliance, for instance, have been dropped onto a hard surface, it must no longer be used: even invisible damage may have adverse effects on the operational safety of the appliance.
- The power cord should be regularly examined for any signs of damage. In the event of such damage being found, the appliance must no longer be used.
- Do not operate the appliance if excessive force has been used to pull the power cord. Damage cannot always be detected from the outside; the entire unit should therefore be checked by a qualified technician before it is used again.
- Before refilling or emptying the water reservoir, remove the plug from the wall socket.
- When removing the plug from the wall

socket, never pull on the power cord; always grip the plug itself.

- This appliance is not intended for use by any person (including children) with reduced physical, sensory or mental capabilities, or lacking experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- No responsibility will be accepted if damage results from improper use, or if these instructions are not complied with.
- This appliance is intended for domestic use only and not for commercial applications.
- In order to comply with safety regulations and to avoid hazards, repairs of electrical appliances must be carried out by qualified personnel, including the replacement of the power cord. If repairs are needed, please send the appliance to one of our customer service departments. The addresses can be found in the appendix to this manual.

Foldable handle

Before the iron is used, fold the handle upwards until it locks securely into the operating position.

After use, the handle can be folded down for space-saving storage by pressing the release button.

Steam switch

With the steam function activated, an additional hot steam jet is emitted from the soleplate. This function is very useful for removing stubborn creases or when ironing difficult or thick fabrics.

- In order to use the steam function, the temperature control must be set to the steam-section marked on the control knob.

Filling with water

Fill the water reservoir before using the steam function or the spray nozzle.

Remove the plug from the wall socket before filling the reservoir.

– This steam iron is to a large extent resistant to hard water (up to 15º dH). Although normal tap water may be used, it is advisable to use distilled, demineralised or decalcified water. Should you be unsure about the hardness of the water in your area, please enquire at the relevant local authority department.
– Open the cover of the water fill hole.
– Fill the empty water reservoir using the measuring cup provided. Fill the reservoir to the indicated “Max” level only.
– Close the water fill hole.

General information about ironing

Always check first whether a label with ironing instructions is attached to the article to be ironed.

– The meaning of the ironing symbols is as follows:
  - • synthetics (low temperature)
  - •• silk and wool (medium temperature)
  - ••• cotton and linen (high temperature)
– These markings can also be found on the temperature control in the form of dot symbols.

- Laundry to be ironed should be sorted according to the fabric ironing temperature. Follow the ironing symbols and start with the lowest temperature.
- When ironing highly sensitive fabrics, or if you are not sure about the fabrics, you may carefully test-iron at a non-visible point, e.g. inside of seam. Start with the lowest temperature.
- If the laundry is being dried in a dryer before ironing, the temperature should be adjusted to “iron dry”. Very dry

fabrics are difficult to iron.

Start up

Clean the steam iron before using for the first time, according to the instructions given in the paragraph ***General care and cleaning***. This will result in the removal of possible dust particles from the soleplate and subsequently lessen the smell typically encountered when first switching on.
Please ensure sufficient ventilation.

Ironing

- Steam ironing requires high temperatures. The temperature level for steam ironing is indicated on the temperature control knob.
- After filling the reservoir with water, place the steam iron upright on its base stand and insert the plug into the wall socket.
- Set the temperature control knob to the required ironing temperature as indicated by the ironing symbols.
- During the heating-up process the indicator light will be on. The light will go out once the required ironing temperature is reached.
- Before ironing any fabrics, the soleplate should be cleaned by passing it over an old, clean cotton cloth, while using the steam jet function; this helps to flush out any dirt residues or lint particles trapped inside the openings in the soleplate.
- With the steam switch, the steam function can be activated as required, or completely switched off for dry ironing.
- For dry ironing, the water reservoir may be empty.
- Place the steam iron upright on its base stand after use and remove the plug from the wall socket.

Using the spray nozzle

The laundry can be dampened by pressing the spray button. This will help to smooth out difficult areas. The spray nozzle may be used at any temperature level during dry or steam ironing.

General care and cleaning

- Before cleaning the appliance, ensure it is disconnected from the power supply and has cooled down completely.
- To avoid the risk of electric shock, do not clean the appliance with water and do not immerse it in water.
- If necessary, the unit may be wiped with a dry fuzz-free cloth.
- Starch, fat and other deposits on the soleplate may be removed with a woollen cloth soaked in a vinegar-water solution.
- In order to protect the clean soleplate, you may occasionally apply a small amount of paraffin to the warm plate, wiping it off with a woollen cloth.
- Do not use abrasives or harsh cleaning solutions.
- Do not put vinegar or other descalers into the water reservoir.
- After a long period of non-use, or once a month, the soleplate should be cleaned as follows:
  - Fill half the water reservoir with water and place it on its base stand.
  - Leave the iron to heat on the highest temperature setting until the indicator lamp goes out.
  - Unplug the appliance, activate the steam function and shake the iron to and fro horizontally over a sink.
  - Hot water and steam will be emitted by the holes in the soleplate. This will result in the removal of dust particles from the soleplate.
  - Pour out any remaining water, let the iron heat up again and pass the soleplate over an old, clean cotton cloth. The remaining water trapped in the soleplate will evaporate, helping the cleaning process.

Disposal

Do not dispose of old or defective appliances in domestic garbage; this should only be done through public collection points.

Guarantee

This product is guaranteed against defects in materials and workmanship for a period of two years from the date of purchase. Under this guarantee the manufacturer undertakes to repair or replace any parts found to be defective, providing the product is returned to one of our authorised service centres. This guarantee is only valid if the appliance has been used in accordance with the instructions, and provided that it has not been modified, repaired or interfered with by any unauthorised person, or damaged through misuse.

This guarantee naturally does not cover wear and tear, nor breakables such as glass and ceramic items, bulbs etc. If the product fails to operate and needs to be returned, pack it carefully, enclosing your name and address and the reason for return. If within the guarantee period, please also provide the guarantee card and proof of purchase.